

2010-2-PAK-NET128

Chiave attivazione apertura network per 32 nodi senza limitazioni di loop (massimo 128 loops). Singola centrale.

Overview

The fire panel allows for its capabilities to be extended by use of USB dongles. These USB dongles are called PAK, which stands for Panel Activation Key. The use of the PAK will activate additional high-end feature(s) in the panel. Depending on the required functionality, separate and multiple PAKs can be used to enable these functionalities. Functionalities like number of nodes/loops, supported detector protocol, used TCP/IP communication protocol for remote monitoring, communication towards management software like BACNet or Modbus, etc, can be enabled by usage of the PAKs. The PAK is tied to the serial number of the panel, but does not have to stay connected to the panel. It can be removed once the PAK has been installed, and the feature is enabled in the panel. It is therefore recommend that PAKs stays with the panel at all time, for example in case of performing reset functions or re-installations.



Dettagli

- Increases panel capacity to 32 nodes & 128 loops network
- Compatible with panel firmware 3.1. or higher

2010-2-PAK-NET128

Chiave attivazione apertura network per 32 nodi senza limitazioni di loop (massimo 128 loops). Singola centrale.

Specifiche tecniche

Generale

Compatibilità	USB type 2.0
---------------	--------------

Fisico

Fattore di forma	Piccolo
Dimensioni fisiche	22 x 70 x 5 mm (W x H x D)
Peso netto	75 g
Peso spedizione	110 g
Tipo di montaggio	In un armadio

Ambientale

Temperatura operativa	-5 to +40°C
Temperatura di immagazzinamento	-20 to +50°C
Umidità relativa	Max. 95% noncondensing

Regolatorio

Certificazioni	EN54-13, EN54-2
Standards	EN54-2 EN54-13
Ambientale	CPD WEEE RoHS